

V1 QUICK START

Silver front panel V1 with firmware number up to 4.16

View the video on the drive

Using the keypad: Press clear, enter the time code, press **GOTO**

Using the jog/shuttle wheel: Press the corresponding key above the jog/shuttle wheel

Jog is the inner wheel. **Shuttle** is the ring. **SloMo** is the ring

How to create a video segment

Locate to desired start of video hit **IN**

Locate to desired end of video hit **OUT**

(**IN** and **OUT** buttons can also be pressed while video is playing)

Press **SAVE**

Assign a number for the segment using the key-pad. Press **ENTER**

How to play the video segment

Press **RECALL**

Enter the segment number

Press **ENTER**

How to make a single video segment loop

Press **RECALL** and enter the segment number

Press **++** and enter the segment number again

Press **ENTER**

Now recall the segment (see "How to play the video segment" above)

How to create a playlist

Create all the segments in the play list (see "How to create a video segment" above)

Press **RECALL**, then enter the first segment number

Press **++**

Enter the next segment number in the playlist

Press **ENTER**

Repeat the above process for the next segment number and so on

To loop the playlist have the *last* video segment recall the *first* video segment in the playlist

How to play a playlist

Press **RECALL** enter the first segment number of the playlist

Press **ENTER**



V1 QUICK START

Silver front panel V1 with firmware number up to 4.16

Menu Operation

Browse the MENU by pressing the Menu ▼ or ▲ key

Browse the OPTION MENU by holding the **OPTION** button and press the **MENU** ▼ or ▲ keys

Menu Navigation: To scroll from one menu item to the next: Press the **MENU** up ▲ or down ▼ keys

Change a value: Use the **TOGGLE** button or Jog Wheel

Navigate the submenus: Use the "++" or "--" keys

Exit the Menu or Abort: Press the **ESC** button

Setup V1 for playback

Ensure that the SCSI terminator is plugged into the SCSI connector of the V1 (if connector is available)

Connect one of the V1's video output BNCs to a Video Monitor. And XLR audio output to an amplifier.

Select **Sync From** in **MENU (02)** and select "Internal Sync" or the sync source connected to the back panel.

Select **Set Video** in **OPTION MENU (03)** and press ++ until you reach "Out ____" and select your video output format.

To PLAY: Go to the desired point of the video and press **PLAY**

Setup V1 for record

The V1 records in a linear fashion across the drive. It will record the audio, video and time code simultaneously.

Select **Input From** in **MENU (05)** and select the video input format connected to the V1 (SVHS, Composite, YUV or SDI)

Select **Audio In** in **OPTION MENU (10)** and select your audio source.

To RECORD: Locate to the desired point on the drive and hold **RECORD** then press **PLAY**

or set **Record At** to "end of file" in **OPTION MENU (36)** for the V1 to start recording at the end of the last recorded video.

Setting New Record Parameters on the Drive

Select **Compress** in **MENU (06)** to set compression bit rate (MPEG2 V1) or ratio (DCT V1) or 8 or 10bit (uncompressed V1)

Select **Video Type** in **OPTION MENU (13)** to set TV format to NTSC (525 line) or PAL (625 line)

Select # **Audio CH** in **OPTION MENU (20)** to set the number of audio channels you will record.

Select **Initialize** in **MENU (07)** to initialize the drive with the above settings. NOTE: this will delete ALL the data on the drive.

Press the **TOGGLE** key. The display asks "are you sure?", hold **OPTION** key and press **TOGGLE** again for yes.

How to erase the video on the drive

Record over the existing video with new material.

Or initialize the drive. See "setting record parameters on the drive" above.

Or use **Stripe TC** in **OPTION MENU (24)** to erase the video and lay down time code across the drive.

Remote Operation

Connect your remote controller to RS-422-1 on the V1 back panel.

Select **Control** in **MENU (00)** and set to "remote"

Select **Emulate** in **OPTION MENU (19)** set to V1, BVW-75 or DVW-500.

Save Current Settings to Memory

Select **Save** in **OPTION MENU (04)** press the "++" key. LCD displays "are you sure?" press the "--" key for yes.

What is the firmware number of my V1?

Go to **OPTION MENU (00)** then press the ▼ key. Next press ++ until you reach "V1 4.xx". This is your firmware number.